
 


C400 Holding Tank

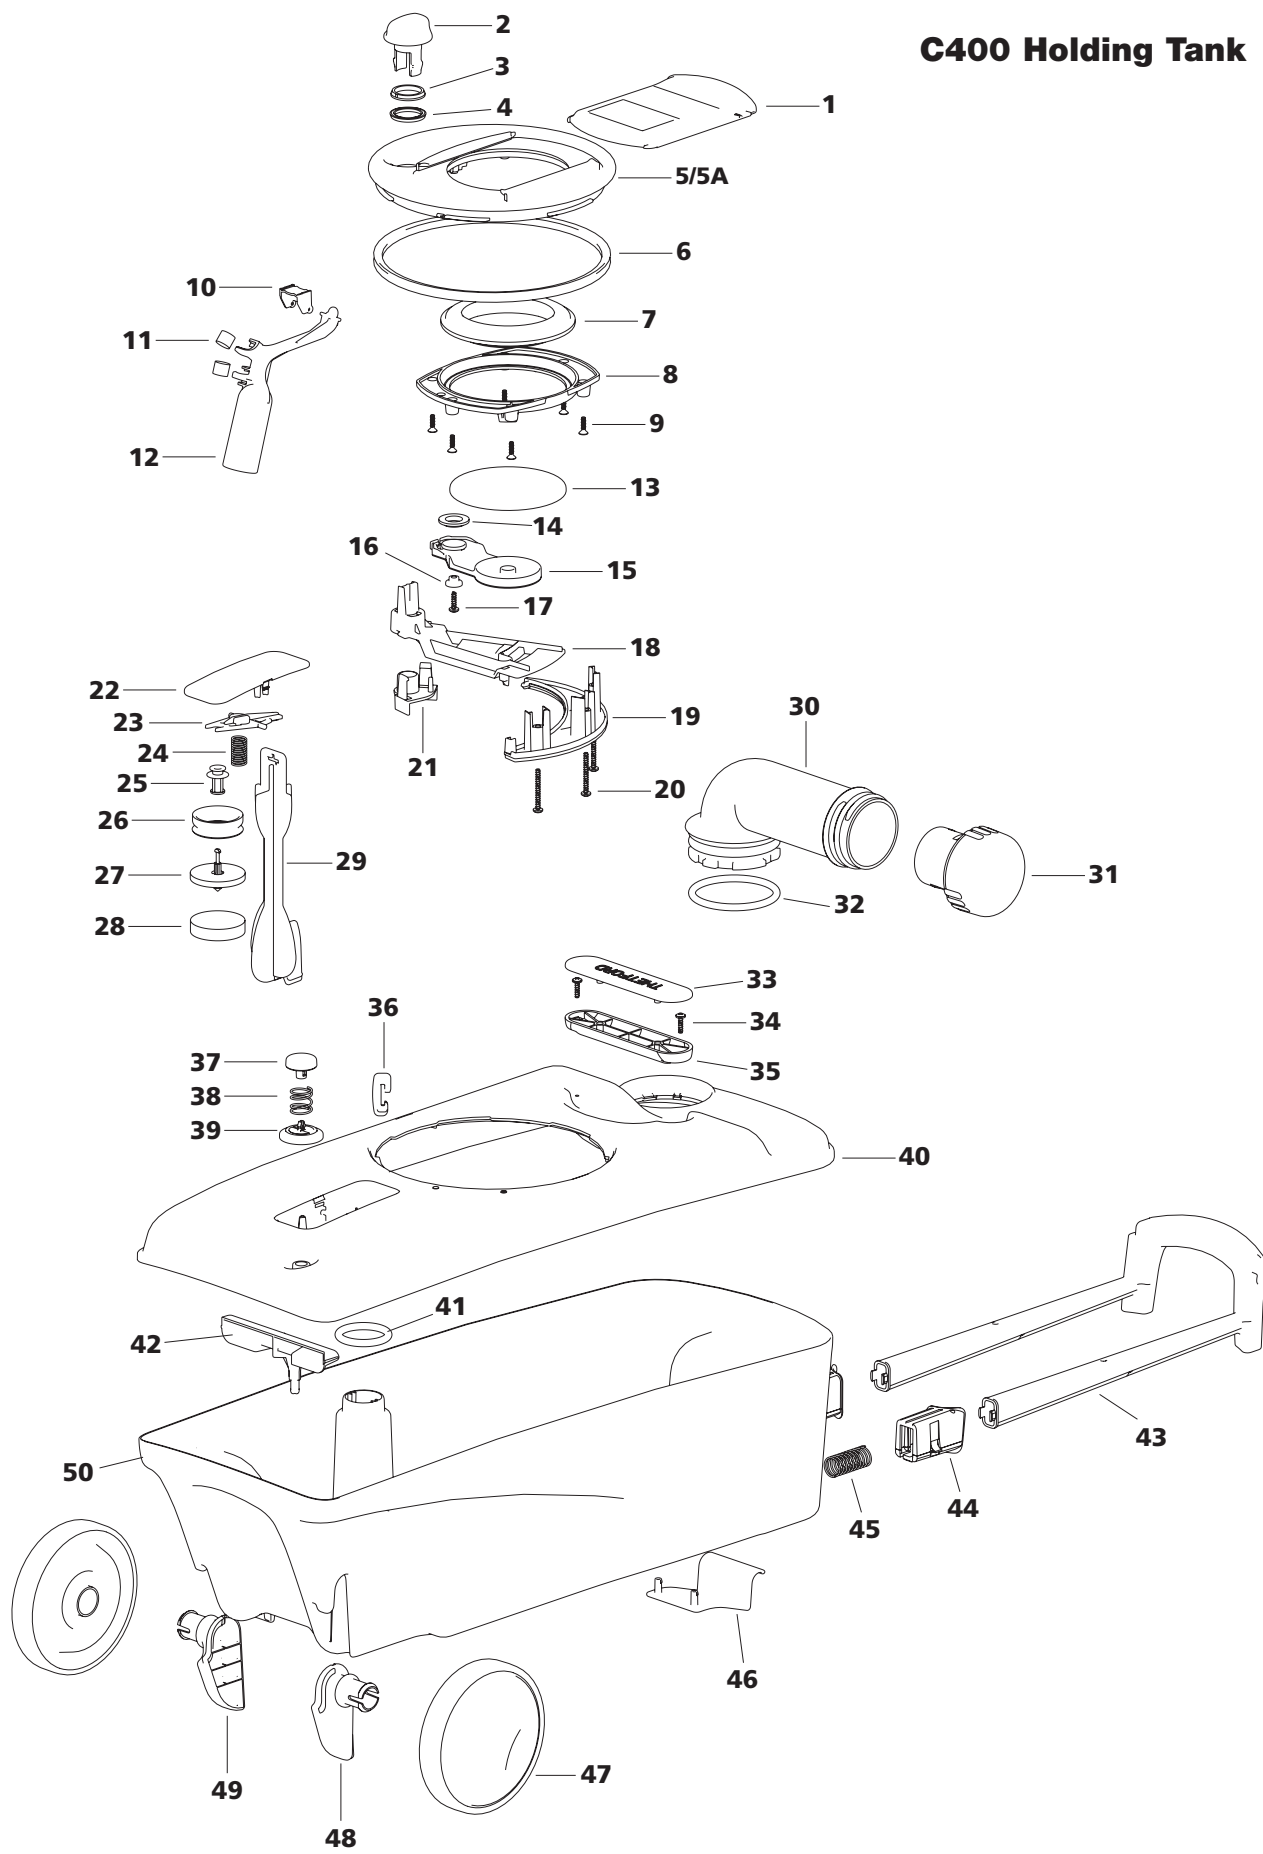

(LO-031.01)



C-400 HOLDING TANK (LO-064.01)

| | Single spare part number | Assembly spare part number | Available in colour number |
|----------------------------------|-----------------------------|-------------------------------|-------------------------------|
| 1. Slidingcover | | 32301 | 06 |
| 2. Blade opener | | 32300 | 16 |
| 3. Washer | | | |
| 4. Seal parker | | | |
| 5. Holding tank plate L* | | 32302 | 06 |
| 5A. Holding tank plate R* | | 32328 | 06 |
| 6. Seal mechanism | | 32303 | |
| 7. Lipseal | 23721 | | |
| 8. Seal plate | | | |
| 9. Screw | | | |
| 10. Retainer | | | |
| 11. Magnet | | 32304 | |
| 12. Float arm | | | |
| 13. Blade | 50731 | | |
| 14. Bearing plate | | | |
| 15. Blade arm | | | |
| 16. Bushing mechanism | | | |
| 17. Screw | | | |
| 18. Blade driver | | | |
| 19. Support track | | | |
| 20. Screw | | | |
| 21. Mechanism retainer | | | |
| 22. Vent lid | | | |
| 23. Vent lifter | | | |
| 24. Vent spring | | | |

Cassette

* SC 400 Holdingtank meachnisme L 32332-06 (number 2 until 21)

* SC 400 Holdingtank mechanisme R 32331-06 (number 2 until 21)

C-400 HOLDING TANK (LO-065.01)

| | Single spare part number | Assembly spar part number | Available in colour number |
|--------------------------------------|-----------------------------|------------------------------|-------------------------------|
| 25. Vent pivot | | | |
| 26. Vent seal | | 32305 | |
| 27. Float stem | | | |
| 28. Float | | | |
| <hr/> | | | |
| 29. Vent actuator | | | |
| <hr/> | | | |
| 30. Pour out spout | | | |
| 31. Measuring cup (assy) | 25810-16 | 32306 | 06 |
| 32. O-ring | | | |
| <hr/> | | | |
| 33. Handle cover | | | |
| 34. Screw | | | |
| 35. Handle | | | |
| 36. Vent clip | | | |
| <hr/> | | | |
| 37. Vent button | | | |
| 38. Vent spring | | 32307 | 16 |
| 39. Vent seal | | | |
| <hr/> | | | |
| 40. Holding tank upper | | | |
| 41. O-ring | | | |
| 42. Wheel support bracket | | | |
| 43. Pull handle | | | |
| 44. Pull handle bushing right | | | |
| Pull handle bushing left | | | |
| 45. Pull handle spring | | | |
| 46. Tank lock clip | 51801 | | 16 |
| <hr/> | | | |
| 47. Wheel | | | |
| 48. Wheel bearing right | | 32308 | 06 |
| 49. Wheel bearing left | | | |
| <hr/> | | | |
| 50. Holding tank lower | | | |
| <hr/> | | | |
| Holding tank complete RH | | 32327 | 06 |
| Holding tank complete LH | | 32326 | 06 |