 



# Porta Potti 235/245/265

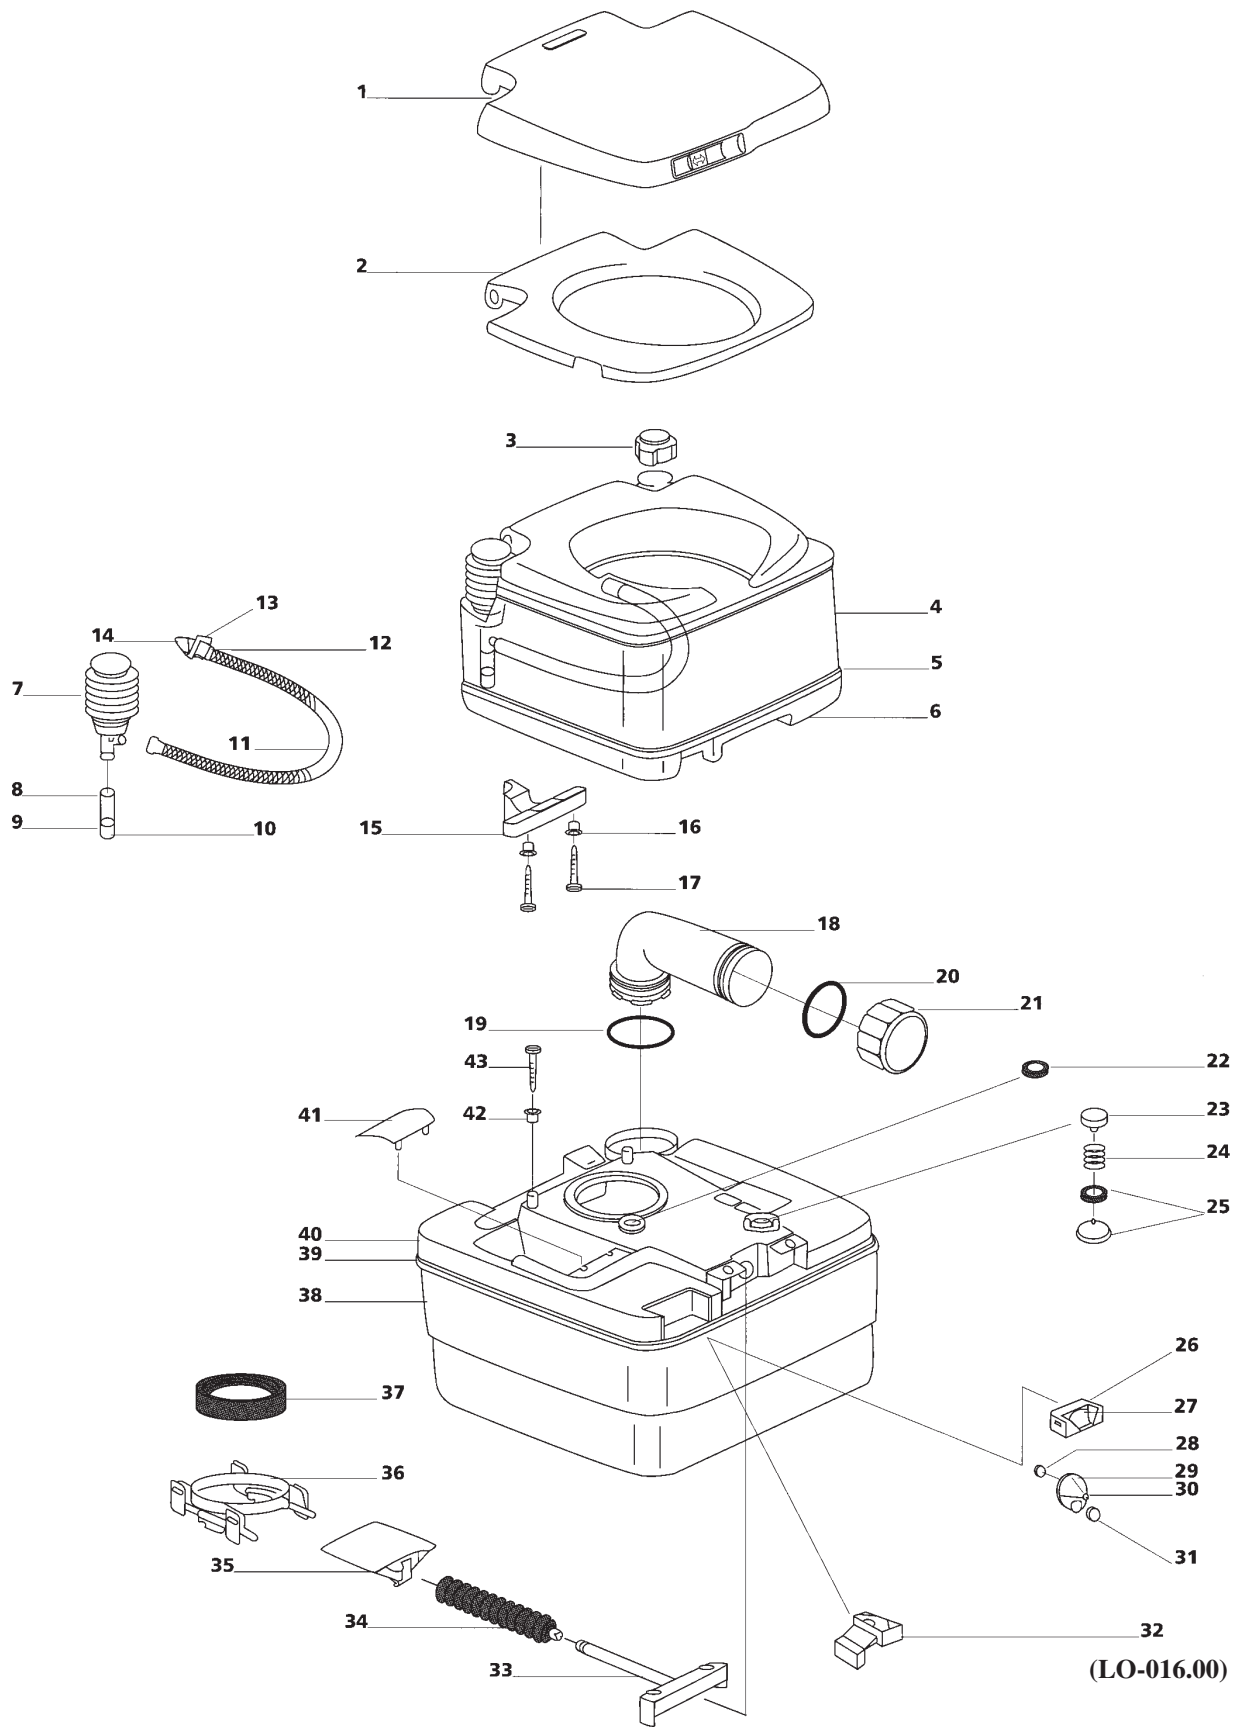

**Porta Potti 235/245/265 (LO-046.00)**

Spare part	Single spare part number	Assembly spare part number	Available in colour number
<b>1.</b> Cover		07317	44/70
<b>2.</b> Seat		(PP 235) 07220	44/70
<b>3.</b> Waterfill cap	25804		70
<b>4.</b> Watertank upper			
<b>5.</b> Weld watertank			
<b>6.</b> Watertank lower			
<b>7.</b> Bellow	07862		62/70
<b>8.</b> Inlet tube		07024	
<b>9.</b> Check valve body		(PP 235) 07016	
<b>10.</b> Check valve flapper			
<b>11.</b> Flush tube			
<b>12.</b> Spring-seal-plunger		07031	62/79
<b>13.</b> O-ring			
<b>14.</b> Nozzle			
<b>15.</b> Clasp handle			
<b>16.</b> Clasp spacer			
<b>17.</b> Screw			
<b>18.</b> Pour out Spout		07492	45/70
<b>19.</b> O-ring (+20.)	16195		
<b>20.</b> Capseal			
<b>21.</b> Dump cap (+20.)	07493		70
<b>22.</b> Ventseal	07102		
<b>23.</b> Vent button			
<b>24.</b> Spring		07524	62/79
<b>25.</b> Seal retainer			
<b>26.</b> Bezel			
<b>27.</b> Lens			
<b>28.</b> Weight			
<b>29.</b> Decal level indicator			
<b>30.</b> Dial			
<b>31.</b> Magnet			
<b>32.</b> Float arm	21322		
<b>33.</b> Valve handle			
<b>34.</b> Boot seal			
<b>35.</b> Blade			
<b>36.</b> Retainer			
<b>37.</b> Lipseal	07101		
<b>38.</b> Holdingtank lower			
<b>39.</b> Weld holdingtank			
<b>40.</b> Holdingtank upper			
<b>41.</b> Clip retainer			
<b>42.</b> Clasp spacer			
<b>43.</b> Screw			
Porta Potti 235	Watertank complete	07212 (excl. Seat and Cover)	45/70
	Holdingtank complete	07213	45/70
Porta Potti 245	Watertank complete	07397 (excl. Seat and Cover)	45/70
	Holdingtank complete	07473	45/70
Porta Potti 265	Watertank complete	07397 (excl. Seat and Cover)	45/70
	Holdingtank complete	07474	45/70

For colournumber see page 68